

Model H-800


Installation and Maintenance Instructions

Questions? Call 800-657-2650 for help

For ALL installations:


- Display or sign load **MUST** be balanced.
- Do **NOT** exceed rated capacity of unit.

Display or Sign mounted on TOP of Rotator:

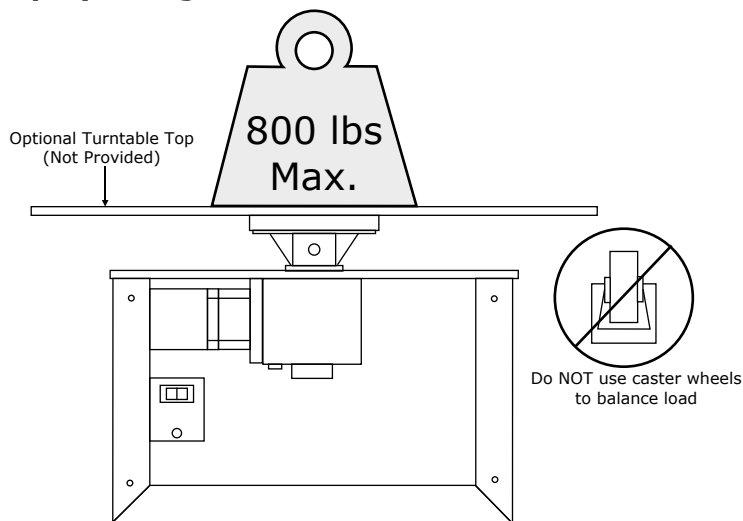

- Maximum compressive weight = 800 lbs.
- Maximum hanging weight = 650 lbs.
- Maximum recommended display size: contact Dynapac.
- Rotator may be mounted facing up or down.
- Rotator must be flat and level.
- Larger diameter turntable top may be attached to rotator turntable.
- Weight **MUST** be balanced (add a counter weight if needed).
- Do **NOT** use caster wheels to support turntable.

Rotator inside display or sign:

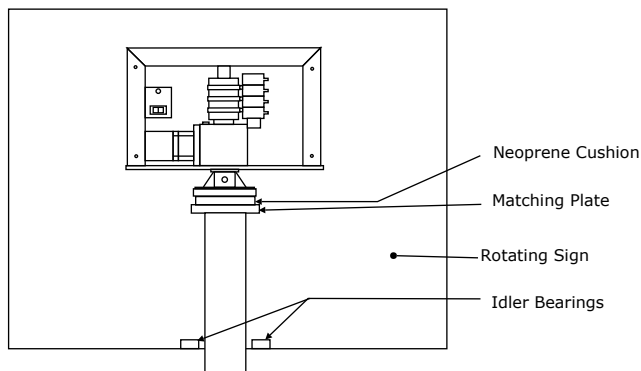

- Maximum compressive weight = 800 lbs.
- Maximum hanging weight = 650 lbs.
- Maximum recommended display size: contact Dynapac
- Mount rotator inside sign, above center line.
- Sign must be welded or bolted to rotator frame.
- Mount idler bearings to stabilize sign.

Maintenance:

No regular maintenance is required for this unit.

